



Pocket Power
Jet Washer

SAFETY AND OPERATING MANUAL

INSTRUCTIONS

TXT 2019 : MULTI - USE PORTABLE POWER CLEANER



GENERAL SAFETY WARNINGS

1. Ensure yellow protection stoppers are removed from the inlet and outlet before fitting the hose connectors.
2. Do not spray liquid at any of the electrical equipment.
3. Keep the appliance out of the reach of children.
4. Do not open or dismantle battery pack or shed battery cells.
5. Do not expose the appliance to heat, fire or direct sun light.
6. Always switch the pump off and release the pressure using the nozzle pressure before breaking into the pressure line.
7. In the event of battery leakage do not allow the liquid to come in to contact with skin or eyes if so seek immediate medical advice.
8. If the jet wash has been stored for long period of time the battery may need to be fully charged and discharged to get maximum out of the battery.
9. The battery will give best performance working at 20°C.
10. Do not use any other electrical equipment for charging or running the jet wash other than the supplied Tiger Tools equipment.
11. Keep literature to refer back to for operating instructions.
12. Any chemicals that have passed through the appliance must be flushed through with clean fresh water following operation.
13. Any misuse or breaking of the appliance seal will invalidate the warranty this does not diminish your statutory rights.
14. Do not short-circuit the battery pack.
15. Charge and discharge the battery on a regular basis to get the best performance from the battery

PUMP WARNINGS

1. Do not run pump with no water running through it.
2. Always switch off pump and release the pressure through the sprayer before releasing the hose connections.
3. Flush with clean water if any chemicals have been put through the pump system.

POKET POWER WASHER OPERATING INSTRUCTIONS

1. Charge the unit battery for 3-4 hours until the fully charged. The light on the mains charger will change from red to green when fully charged.
2. Charge and discharge the battery on a regular basis to get optimum power from the battery
3. Remove the yellow stoppers from the inlet and outlet hose connectors if fitted
4. Before fitting the hose connectors to the inlet and outlet on the pump unit, fit the black seals that come with the connectors. They need to be tightened with a 17 mm spanner to prevent leaks.
5. If the water source is from a bucket, fit the inlet onto the hose connector and click into place. The inlet is marked on the pump housing and is the same side as the on/off switch.
6. If the water source is from a hosepipe, connect the hose to the inlet hose connector on the unit that is marked IN on the pump housing which is on the same side as the on/off switch.
7. Before fitting the black pressure outlet hose, make sure that the plastic knurled nuts are done up tight to prevent leakage.
8. Fit the sprayer connector; make sure that it clicks home into the pressure hose connector.
9. Turn on the water supply and check for leaks, if water supply is a bucket make sure that it is clean fresh water, insert the filter end in to the bucket and fit the adjustable hose clip to keep filter at the bottom of the bucket.
10. Set the required spray pattern on the nozzle, turn the nozzle clockwise to increase the pressure and anti-clockwise to get a finer and direct spray.
11. Turn on the unit and operate the trigger on the sprayer to allow the air in the system to be expelled.

OPERATION OF THE SOAP DISPENSER

1. Turn off pump and operate the trigger on the sprayer to release the pressure.
2. Pull back the locking sleeve on the black pressure hose and remove the sprayer head.
3. Push on the soap dispenser and make sure it clicks home into the black pressure hose connector then refit the sprayer as before.
4. Add 10 - 20 ml of liquid detergent required into the clear dispenser.
5. Screw home the dispenser into the lid ensuring the white seal is in place first.
6. Check that the soap dispenser selector switch that is on the top is in line with the hose and sprayer; this will only let water through.
7. Set the required spray setting on the sprayer nozzle (it is normally best to start with a fine spray) you can then alter the spray to suit your needs.
8. Turn on pump and check for leaks.
9. There are three settings on the sprayer selector switch as you turn it clockwise you will hear it click at each setting.

POKET POWER WASHER TECHNICAL DATA

VOLTS.	12v
RATED POWER	60W
WORKING PRESSURE.	70 PSI
PROTECTION CLASS.	IP54
CHARGE FROM EMPTY	
FOR 100-240V (50/60 H ₂).	3 HR
FOR USB ADAPTER.	6 HR
CONSTANT OPERATING TIME.	35/40 MIN
MAX SUCTION HEIGHT.	1.8 M
MAX AMBIENT TEMP.	40°C
MIN AMBIENT TEMP.	-10°C
SOUND PRESSURE LEVEL K _{PA} .	61 dB(A)
VOLUME OF WATER.	4-5 Ltr/Min

DECLARATION OF CONFORMITY

We

Triple X Trading Ltd

Unit 104, 91 Mayflower Street
Plymouth
PL1 1SB

Declare that the product Model no **TXT 2019**

Complies with the following Directives:

Machinery Directive. **2006/42/EU**

Low Voltage Directive **2014/35/EU**

Electromagnetic compatibility **2014/35/EU**

Standards Conform to:

EN ISO 12100:2010

EN 60204-1:2012

EN 60335-1:2012+A13:2017

EN 62233:2008+AC2008

EN 55014-2:2015

EN 55014-1 :2017

